

NOTICE

Enterasys Networks and its licensors reserve the right to make changes in specifications and other information contained in this document without prior notice. The reader should in all cases consult Enterasys Networks to determine whether any such changes have been made. The hardware, firmware, or software described in this manual is subject to change without notice. IN NO EVENT SHALL ENTERASYS NETWORKS AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS MANUAL OR THE INFORMATION CONTAINED IN IT, EVEN IF ENTERASYS NETWORKS AND ITS LICENSORS HAVE BEEN ADVISED OF, KNOWN, OR SHOULD HAVE KNOWN, THE POSSIBILITY OF SUCH DAMAGES.

Enterasys Networks, Inc.  
35 Industrial Way  
Rochester, NH 03866-5005

© 2001 by Enterasys Networks, Inc.  
All Rights Reserved  
Printed in the United States of America

Order Number: 9033744 September 2001

X-Pedition and Enterasys Networks are registered trademarks of Enterasys Networks or its licensors. All other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies.

FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **NOTE:** This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator’s manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at his own expense. **WARNING:** Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

INDUSTRY CANADA NOTICE

This digital apparatus does not exceed the class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications. Le présent appareil numérique n’émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

VCCI NOTICE

This is a class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（V C C I）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

CLASS A ITE NOTICE

**WARNING:** This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

DECLARATION OF CONFORMITY

Application of Council Directive(s):	<b>89/336/EEC</b> <b>73/23/EEC</b>
Manufacturer’s Name: Manufacturer’s Address:	<b>Enterasys Networks, Inc.</b> <b>35 Industrial Way</b> <b>PO Box 5005</b> <b>Rochester, NH 03867</b>
European Representative Name: European Representative Address:	<b>Mr. Jim Sims</b> <b>Enterasys Networks Ltd.</b> <b>Nexus House, Newbury Business Park</b> <b>London Road, Newbury</b> <b>Berkshire RG14 2PZ, England</b>
Conformance to Directive(s)/ Product Standards:	<b>EC Directive 89/336/EEC</b> <b>EC Directive 73/23/EEC</b> <b>EN 55022</b> <b>EN 55024</b> <b>EN 60950</b> <b>EN 60825</b>
Equipment Type/Environment:	<b>Networking Equipment, for use in a</b> <b>Commercial or Light Industrial Environment.</b>

Enterasys Networks, Inc. declares that the equipment packaged with this notice conforms to the above directives.

AGENCY STANDARDS

Safety

Meets the requirements of UL 1950, CSA C22.2 No. 950, EN 60950, IEC 950, and 73/23/EEC.

Electromagnetic Compatibility

Compliant with the requirements of FCC Part 15, CSA C108.8, EN 55022, VCCI Class A, EN 50082-1, and 89/336/EEC.

Network Interfaces

XP-FPHY-01 MMF DAS  
XP-FPHY-02 UTP SAS  
XP-FPHY-09 SMF DAS

Number of Flows/Routes

Up to 128,000 Layer-2 entries per port  
Up to 256,000 Layer-3/4 entries

Queue Buffer

Packet memory size: 8MB

Physical Dimensions

Size: 52.9 cm H x 5.5 W x 40.1 D (20.9 in. H x 2.17 W x 15.8 D)  
Weight: 1.4 kg (3.0 lbs)

Power Consumption

BTU/hr = 203.14  
AC Volt Amps = 60.12

Temperature

Operating: 41° to 104° F (5° to 40° C)  
Storage: -22° to 164° F (-30° to 73° C)

Humidity

5% to 90% (non-condensing)

CONNECTIVITY GUIDELINES

Table 1 Recommended Cable Types and Specifications

Cable	Type	Max. Length	Connector
FDDI Copper	Cat. 3, 4, 5 100-ohm UTP	100 m (328 ft)	RJ45 (XP-FPHY-02)
Multi-mode Fiber	62.5/125	2 km (1.24 mi)	SC (XP-FPHY-01)
Single-mode Fiber	10/125	30 km (18.64 mi)	SC (XP-FPHY-09)

OPTICS

Table 2 Receiver/Transmitter

Receiver Sensitivity			Transmit Power		
	MMF	SMF		MMF	SMF
Minimum	-34 dBm	-33 dBm	Minimum	-20 dBm	-8 dBm
Maximum	-31 dBm	-3 dBm	Maximum	-14 dBm	-3 dBm

Table 3 Links

Link Power Budget	
MMF	11 dB
SMF	>10 dB

LEDs

Table 4 LED Indicators

LED	Condition				Status
Rx	Off				No activity
	Flashing Yellow				Activity
	Red				Diagnostic failure
Tx	Off				No activity
	Flashing Green				Activity
	Blinking Yellow				Port on standby
	Red				Diagnostic failure
Primary/Secondary Port LEDs (A, B, P, S)	<b>A</b>	<b>B</b>	<b>P</b>	<b>S</b>	
	Yellow	Yellow	Off	Off	Port enabled, not active
	Off	Off	Off	Off	Ports disabled
	Green	Green	Off	Off	Ports enabled
	Green	Green	Green	Off	THRU A
	Green	Green	Off	Green	THRU B
	Green	Off	Green	Yellow	WRAP A
	Off	Green	Green	Yellow	WRAP B
	Green	Green	Green	Yellow	WRAP AB
	Green	Off	Green	Off	WRAP S (in S mode)
	Green	Green	Off	Off	BYPASS Board
	Green	Green	Red	Red	TWISTED A-A, B-B
	Red	Red	Red	Red	Diagnostic Failure

INSTALLING THE MODULE



**ELECTRICAL HAZARD:** Only qualified personnel should perform installation procedures.

Handling the Module



**CAUTION:** The ER16-FDDI-02 is easily damaged by electrostatic discharge.

To prevent electrostatic damage, observe the following guidelines:

- Do not remove the module from its packaging until you are ready to install it.
- Do not touch any of the module’s pins, connectors or components.
- Hold the module only by its edges or front panel.
- Wear an anti-static wristband connected to a suitable earth ground whenever handling the module.
- Store or transport this module only in appropriate anti-static packaging.


Equipment Checklist

After unpacking the ER16-FDDI-02, check the contents of the box to be sure you received the following items:

- One ER16-FDDI-02 module in anti-static bag
- One disposable anti-static wristband

Tools

This installation requires the following tools:

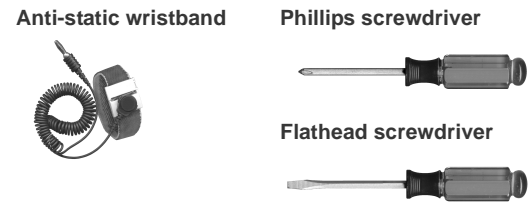

Preliminary Setup

Firmware Image Requirements

Version 8.3.0.0 or later.

Preparing the Module

- Before installing the module, you must install at least one of the following XP-FPHYs (purchased separately): XP-FPHY-01, XP-FPHY-02, or XP-FPHY-09.

Connector Pin Assignments

The connector pins are assigned as follows:

Table 5 DB9-RS232 Console Port Pin Assignments

Pin	Connection
1	TX +
2	TX -
3	Unused
4	Unused
5	Unused
6	Unused
7	RX +
8	RX -

Hotswap

You may install this module into a live system without powering off the device. However, do not remove an active module from a live system except under the following conditions:

- Press the **Hotswap button**. The **Online LED** will turn **off** and the **Offline LED** will turn **on**.

OR...

- Enter the following from the CLI and click enter: **Enable -> System -> Hotswap -> Out -> Slot -> #**. The **Online LED** will turn **off** and the **Offline LED** will turn **on**.

Instructions


**CAUTION:** Before performing any upgrade or installation, ensure that you are properly "grounded" to avoid electrostatic discharge. The switch must be powered off before installing or replacing any module.

1. **Open the ejectors** at the top and bottom of the module. If a cover plate is installed in the slot where you will install the ER16-FDDI-02 module, **remove the cover plate**: loosen the screws on the ejectors until the screws pop out, then open the ejectors and pull out the plate.
2. **Align the metal backpanel of the module with the card guides** at the top and the bottom of the slot opening, as shown in Figure 1.

**NOTE:** Make sure that the metal backpanel of the ER16-FDDI-02—not the circuit card—is between the card guides. Check both the upper and lower tracks.

3. **Slide the ER16-FDDI-02 all the way into the slot**, firmly but gently pressing to ensure that the pins on the back of the module are completely seated in the backplane.
4. To lock the ER16-FDDI-02 into the slot, **close the ejectors**. Using a flathead screwdriver, tighten the screw on each ejector.

Figure 1 Install the FDDI Module

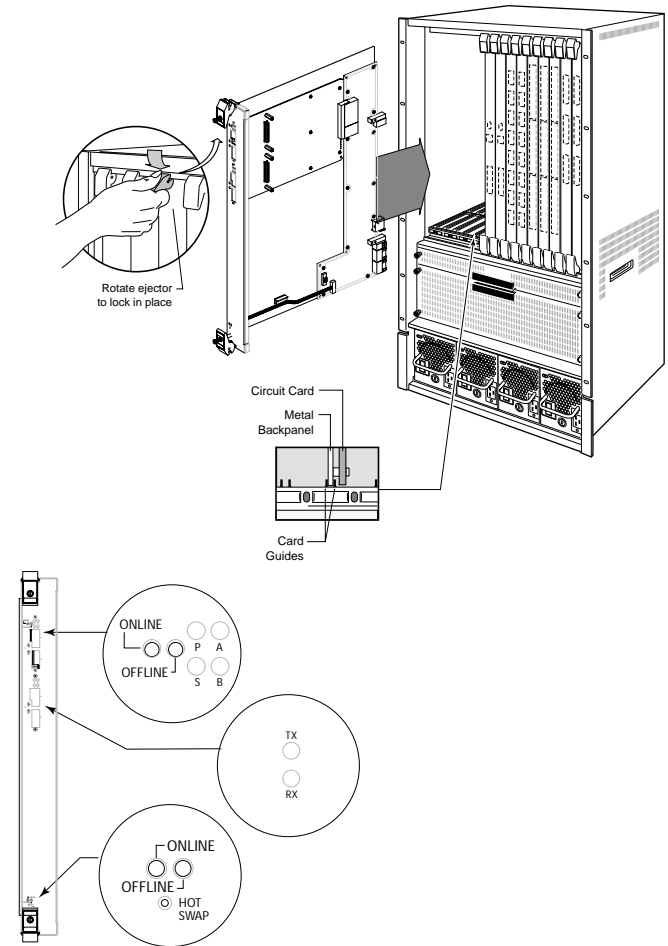

TROUBLESHOOTING

Proper Boot Sequence

- Firmware loads.
- The LEDs on Port 1 light in the following order: A, B, P, S, Rx, and Tx. After the Tx LED lights, all LEDs turn off and the online LED turns green.
- Diagnostic messages display for each line card.
- Status lights on line cards go online.
- Link lights activate for connected lines.

Common Errors

- Ensure the ER16 is powered up.
- Ensure that the device attached to the module is powered up and operating correctly.
- Ensure that the module is properly seated in the slot.
- Check the connectors on both ends of the cable to be sure they are properly engaged. When attaching fiber cable to an SC-type port, be sure the plug clicks into place to ensure that it is properly seated.
- If you are using fiber optic cable with an ST-type connector in conjunction with an SC-ST port converter, try switching the TX and RX connectors.

Helpful CLI Commands for Debugging

- **System show hardware**
- **System show version**
- **System show bootlog**

ADDITIONAL INFORMATION

For additional information about installing this module or to learn more about what capabilities are included in the firmware release you are using, visit the Enterasys Networks web site.

Getting Help

For additional support related to the Common CLI syntax or this document, contact Enterasys Networks using one of the following methods:

<b>World Wide Web</b>	<a href="http://www.enterasys.com/">http://www.enterasys.com/</a>
<b>Phone</b>	(603) 332-9400
<b>Internet mail</b>	<a href="mailto:support@enterasys.com">support@enterasys.com</a>
<b>FTP Login Password</b>	<a href="ftp://ftp.enterasys.com">ftp://ftp.enterasys.com</a> anonymous your email address
<b>To acquire the latest image for this product and any available release notes</b>	<a href="http://www.enterasys.com/download">http://www.enterasys.com/download</a>
<b>Additional documentation</b>	<a href="http://www.enterasys.com/support/manuals">http://www.enterasys.com/support/manuals</a>

To send comments or suggestions concerning this document, contact the Technical Writing Department via the following email address:  
**TechWriting@enterasys.com**  
Please include the document Part Number in the email message.

Before contacting Enterasys Networks for technical support, have the following information ready:

- Your Enterasys Networks service contract number
- A description of the failure
- A description of any action(s) taken to resolve the problem (e.g., changing mode switches, rebooting the unit)
- The serial and revision numbers of all involved Enterasys Networks products in the network
- A description of your network environment (layout, cable type, etc.)
- Network load and frame size at the time of trouble (if known)

ER16-FDDI-02

Quick Start

Web Site: <http://www.enterasys.com/>

9033744